

© Copyright Borg & Overström.  
This guide is printed by Borg & Overström and shall not be reproduced or copied in anyway.  
Ref: 702767 Version: 01

borgandoverstrom.com  
sales@borgandoverstrom.com  
Email  
+44 (0)1362 695 006  
Telephone

Customer services:  
aftersales@borgandoverstrom.com  
call +44 1362 695 006

# Sensorbeam Instructions



Chilled



Sparkling




Ambient



Hot

## Kit content includes:


- 1 x Sensorbeam with harness
- 1 x Sensorbeam sticker
- 1 x Open grommet

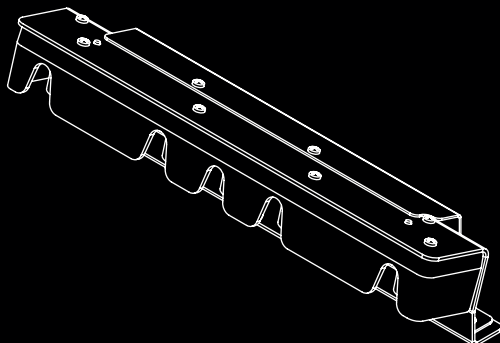


borg &  
overström

# Step-by-step Installation Instructions


Firstly safely decommission the countertop E4/E6. To do this switch off the unit from the rear and turn off the water supply to the unit.

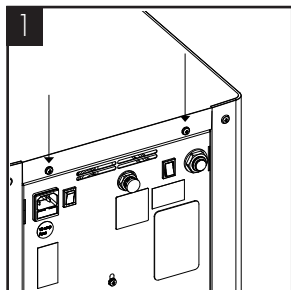


1 Remove the two screws at the rear of the unit and take off the top lid by sliding back and lifting.

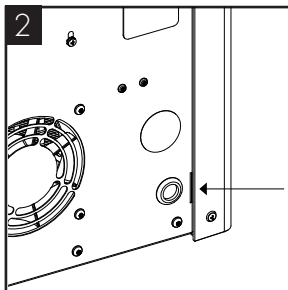


2 Remove the existing closed grommet located on the bottom right of the backplate.

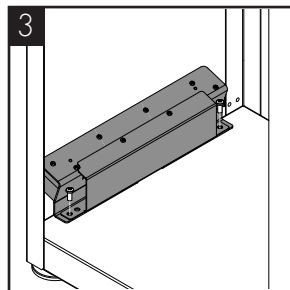


3 Take the sensorbeam and fix to the cabinet base using the m4 fixing screws provided and pass the wiring harness through the back of the cabinet.

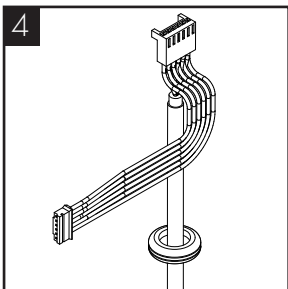

4 Push the supplied open grommet over the wiring harness connections and fit into the backplate hole as previous.

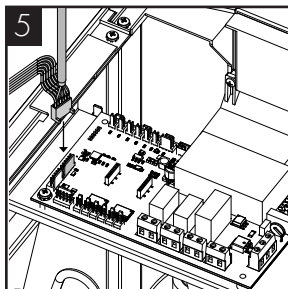

5 For E6 plug into the board labelled 'Foot Switch' as shown.

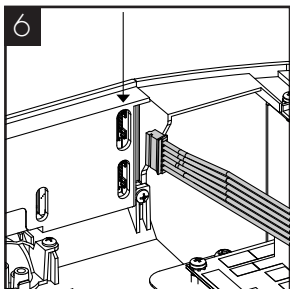

6 For E4 connect the harness to the back of the HMI as shown.

7 Tidy up any loose wires with the cable ties as supplied, paying particular attention to inside the unit.

## Commissioning

1. When turning the unit on for the first time please ensure that there is nothing underneath the Sensorbeam.
2. Turn on the unit. You will see the lights come on and it will automatically calibrate itself and be ready for use.

Please note, when cleaning the floor around the unit ensure the product is switched off to avoid any unwanted dispensing.